


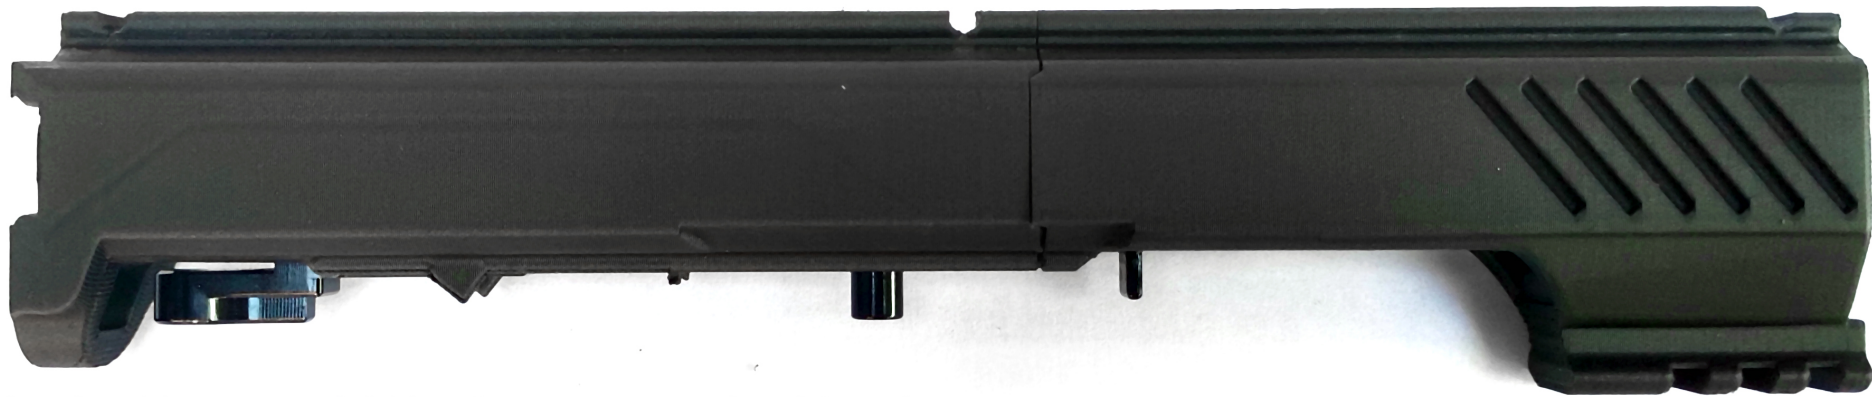



Insert the Boltcatcher into the Breach



Slide the Front- and Backpart onto the Metalcore



Slide the Topcovers onto the bottom Bodyparts



Secure the topcover Parts with the three provided Screws





Secure the front top Part on the Bottom to the front bottom Body Part with the one provided Screw



Assemble your EMF MG100 as usual